


1, 2, 3, 8, 9, 17, 26, 27, 30, 32, 31, 33, 43, 26, 30, 48, 43, 26, 30, 48, 17, 26, 27, 30, 32, 31, 33, 3, 8, 9, 17, 26, 27, 30, 32, 31, 33, 43, 26, 30, 48, 43, 26, 30, 48, 17, 26, 27, 30, 32, 31, 33, 6, 12, 14, 15, 16, 17, 18, 19, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100


UBL21

UCH21

UCH21 UY1N

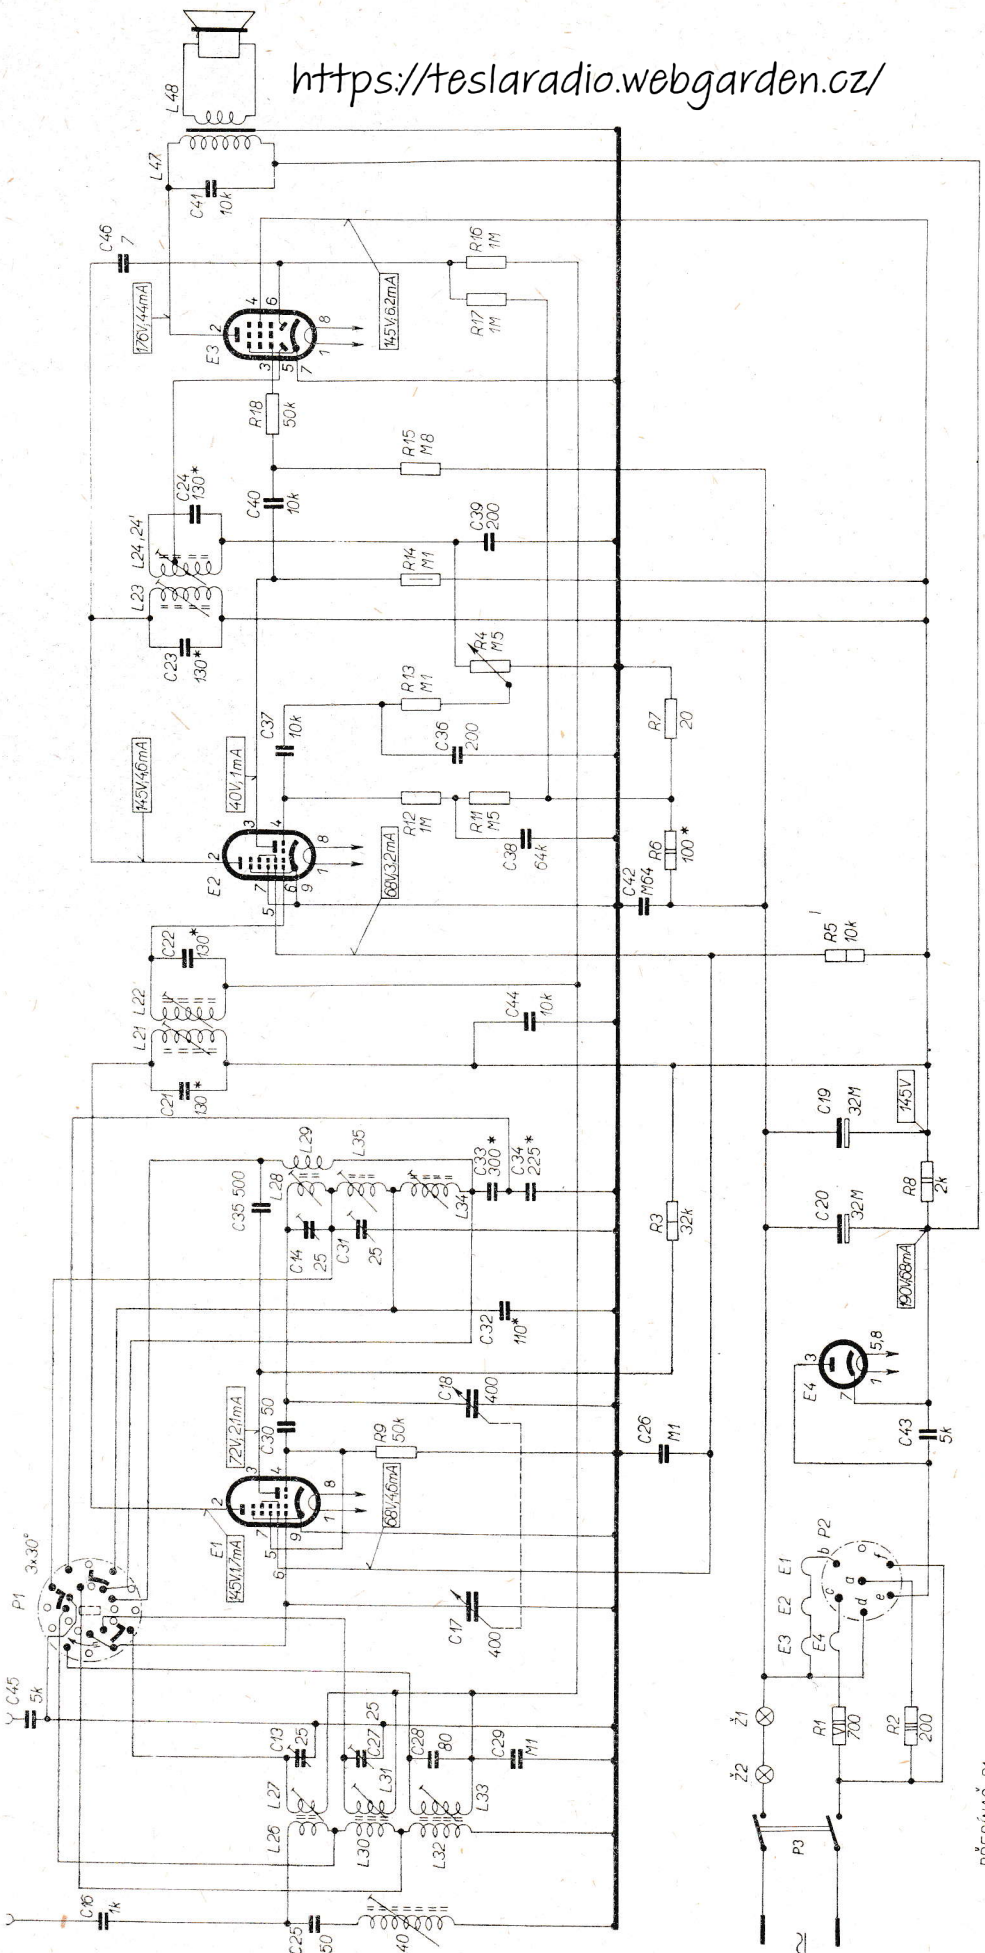

 PATICE ELEKTRONEK



VOLIČ NĀPĚTÍ P2

MAPĚTÍ	SPROJ DOTĚKY
120V	a-b, c-d, e-f,
220V	a-e, b-c,

ROZSAH

SPROJENÉ DOTĚKY P1
KV 2-3-4, 15-17,
SV 4-5-6, 9-10-12, 17-18,
DV 20-21,

